


(3) 2014+ Transit Connect Side Door Module Installation Instructions (DIRECTV)


Step 1: Install plus nuts to both sides (left and right) of the transverse mount angle (top) of the Side Katerack

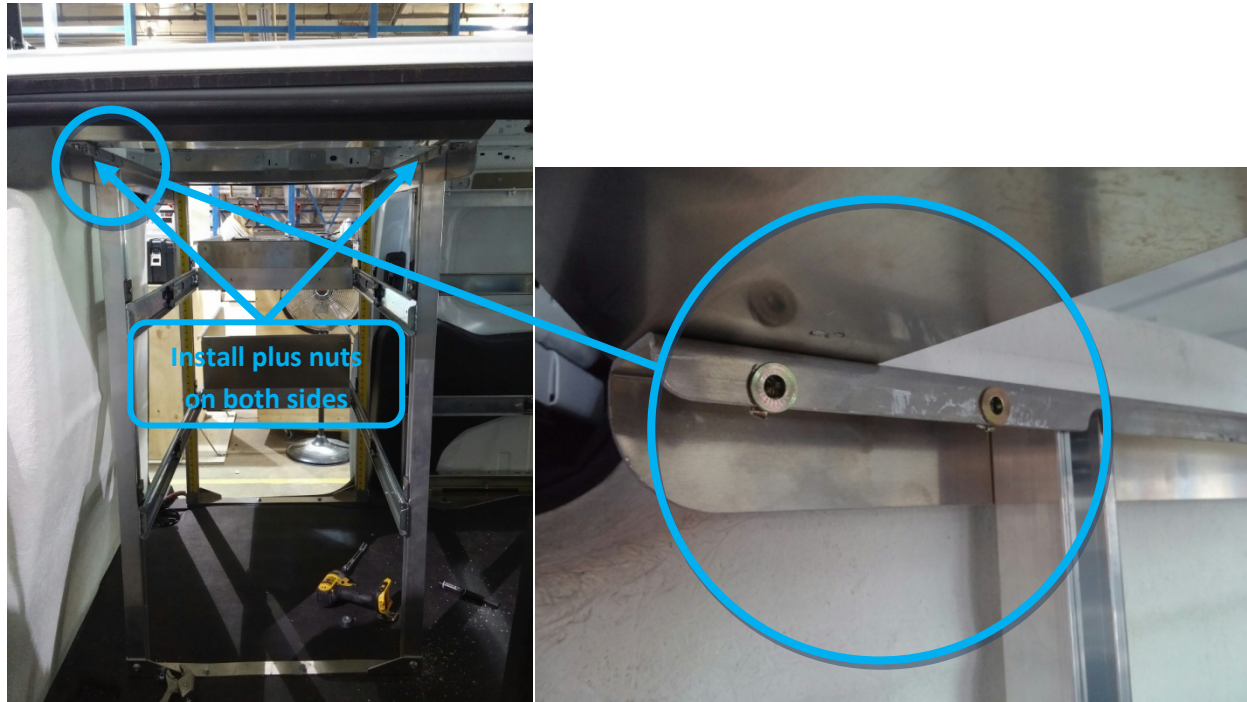

Step 2: Slide the Side door module into position (do not install yet) the top brackets on both sides to the transverse mount angle



Step 3: While the side module is in location, mark the positions on the strut channel where the lower brackets will be connected. Remove door module and drill the respective holes on both the strut channels

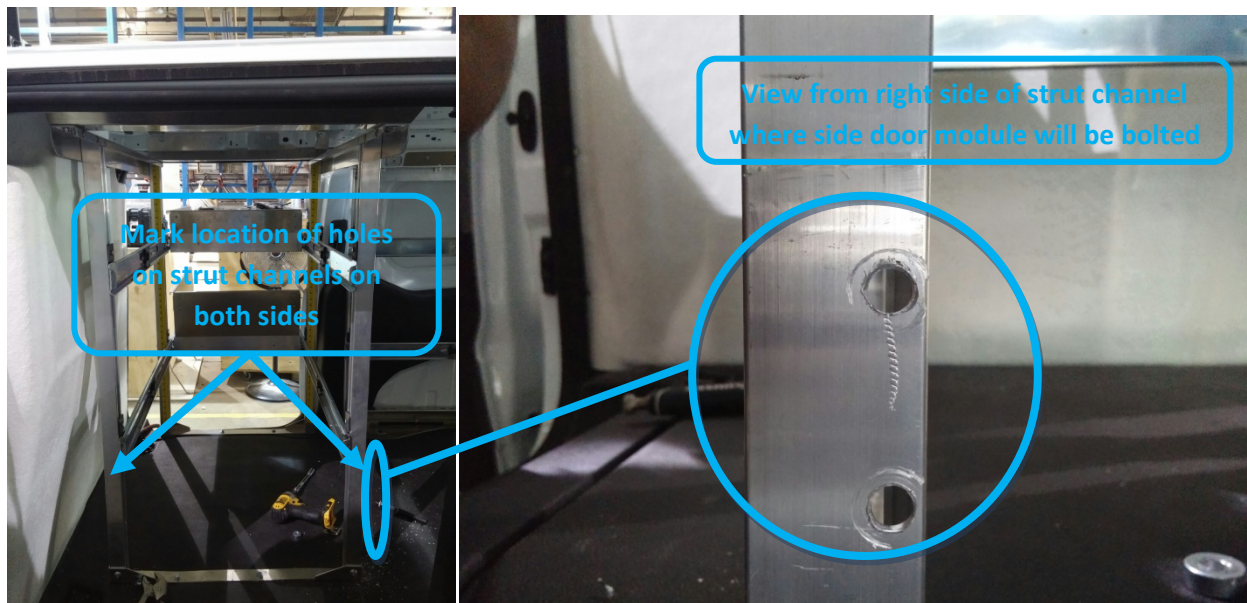

Step 4: Slide Side Door Module back into position and connect upper brackets to transverse mount angles and lower brackets to the Side Katerack strut channels. Ensure that the entire installation is bolted tightly enough

