


Side DuraRac Fixed Divider Shelf Installation Instructions

Ford Transit Med/ High Roof Full Size Van (129.9" or 147.6" Wheelbase)

Kit Part Number CRC 22-2900-001

Revision 1.0 11/12/14

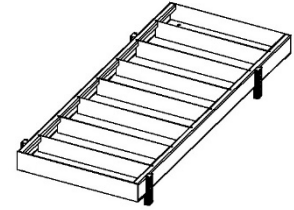

STEP 1. These instructions are based on having a ready-to-install assembled divider shelf. If not, refer to Dejana drawing number CRC 22-2900-001 for kit assembly instructions.

STEP 2. The divider shelf is to be set at a 48" height. Insert the supplied strut nut assemblies into the strut channel and snug down 1/4"-20 hex bolts with the supplied wrench. Align all (4) strut nut inserts vertically at 48" measured from the floor to the top of the strut insert.

STEP 3. Bolt the fixed divider shelf to the strut nut inserts using the supplied fasteners.

STEP 4. Re-check that the divider shelf is at the desired height. Finish tightening the 1/4"-20 hex bolts to 80 in-lbs.

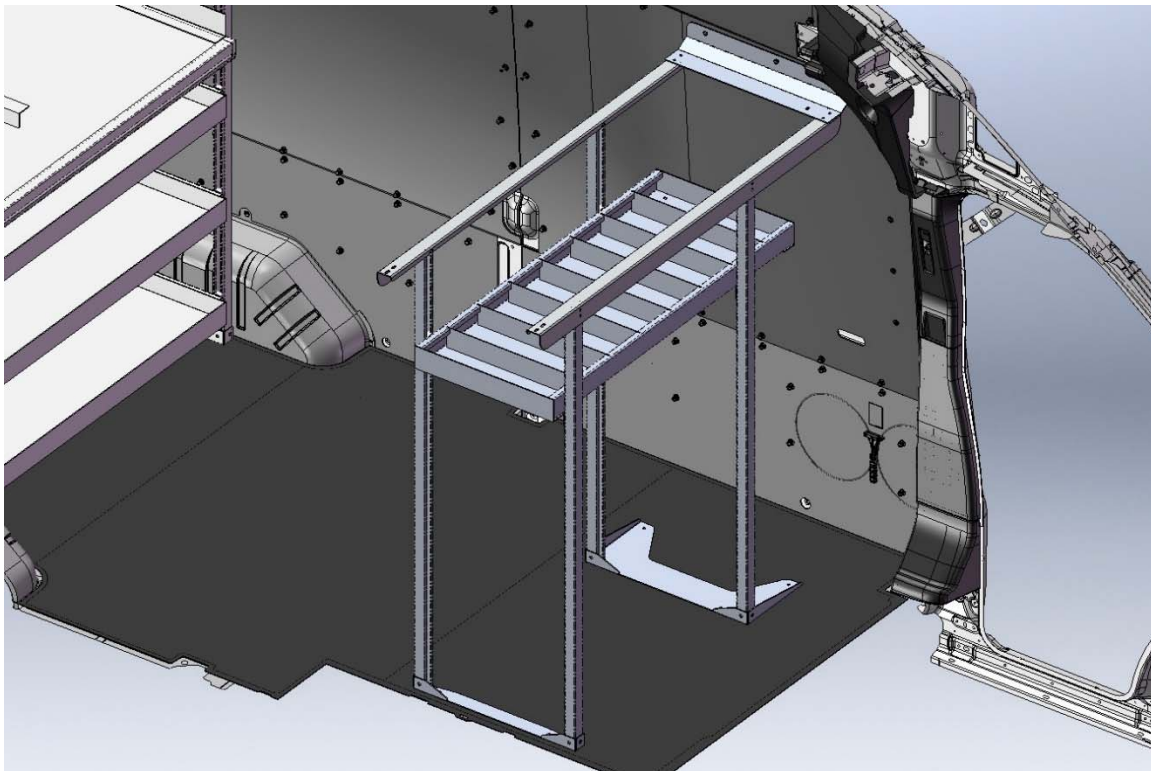


Figure 1: Installed Fixed Divider Shelf (other installed drawers not shown for clarity)