



ProMaster City Rear Katerack Installation Instructions


Step 1: Drill and insert ¼-20 Plusnuts on the top roadside and curbside brackets of the Katerack



Step 2: On the front lower brackets (both roadside and curbside), use factory D ring and hardware to fasten to the floor at the locations shown



Step 3: Use factory D ring and hardware for the rear end of both roadside and curbside brackets

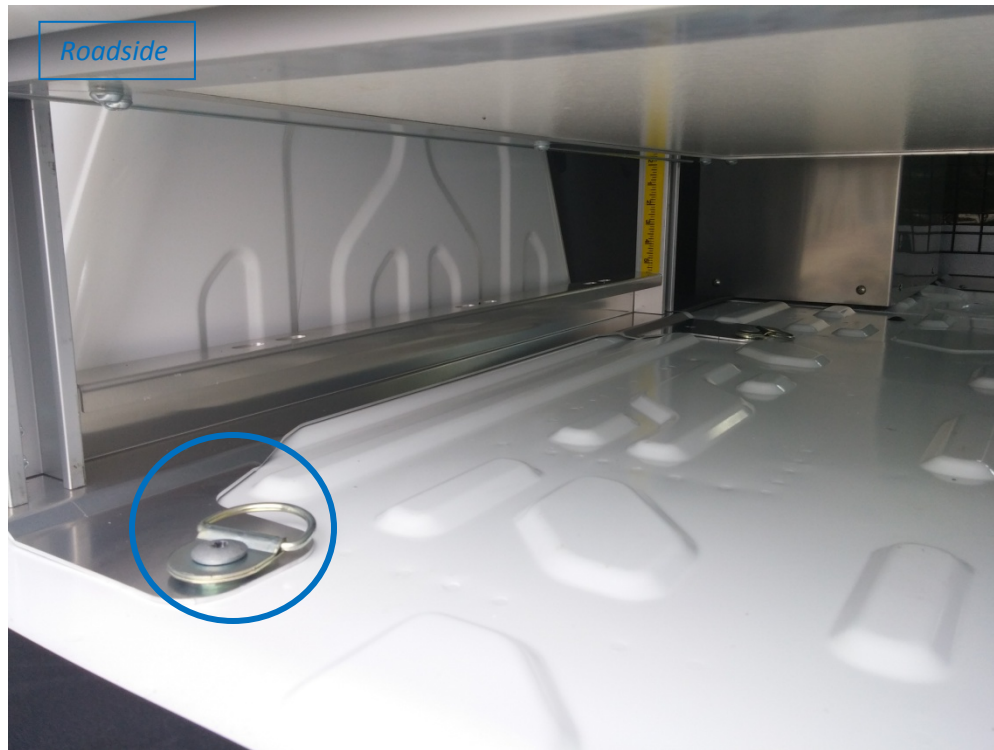

Step 4: Install the Drawers in the desired locations. Note that, to ensure that the drawers are parallel with the floor, there will be a slight slant between the front and rear of the drawer (shown next page).



